

Window & Door Products

Orangery

Home Extension Products

Conservatory Products





Skylight Products

# *Classic* **Cornice Corner**

Installation Guide

Version 1.0 | June 2011


## INSTRUCTIONS

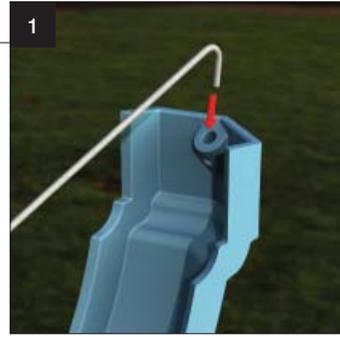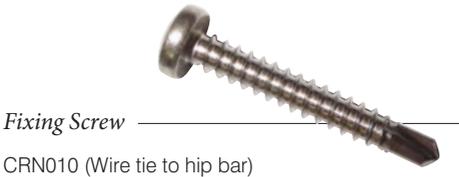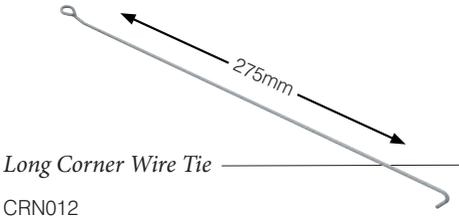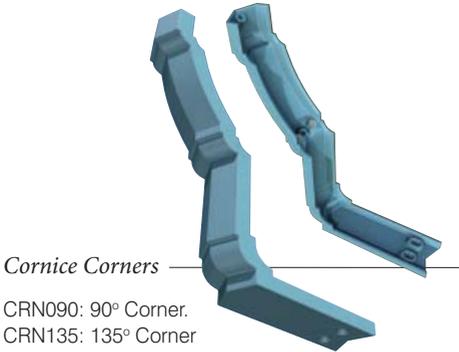

1. Prior to fitting the corner insert the special longer wire tie CRN012, into the corner as indicated



2. Whilst ensuring that the corner remains located in position, screw fix using self drilling screws CRN007

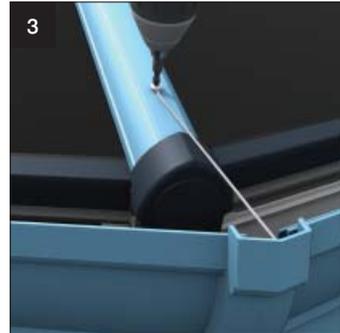

3. Finally secure the corner by screw fixing the wire tie to the glazing bar using self drilling screw CRN010

Please note that it is not compulsory to fit the corners. If a crisp sharp mitre is required the corners need not be fitted, provided due care has been taken during installation. If on the other hand the 'look' of the cast corner is preferred follow the instructions above for each relevant corner. Corners will be supplied for the 135° & 90° external corners. Other angles, straight joints or internal mitres do not currently enjoy the benefits of a jointer.

Technical Helpdesk: 0843 208 6953

[www.ultraframe.co.uk](http://www.ultraframe.co.uk)

Ultraframe (UK) Ltd, Salthill Road, Clitheroe, Lancashire. BB7 1PE

**ultraframe**  
Transforming light and space